


3.3 MAIN CONTROL ASSY (1/3)

A

B


C

D

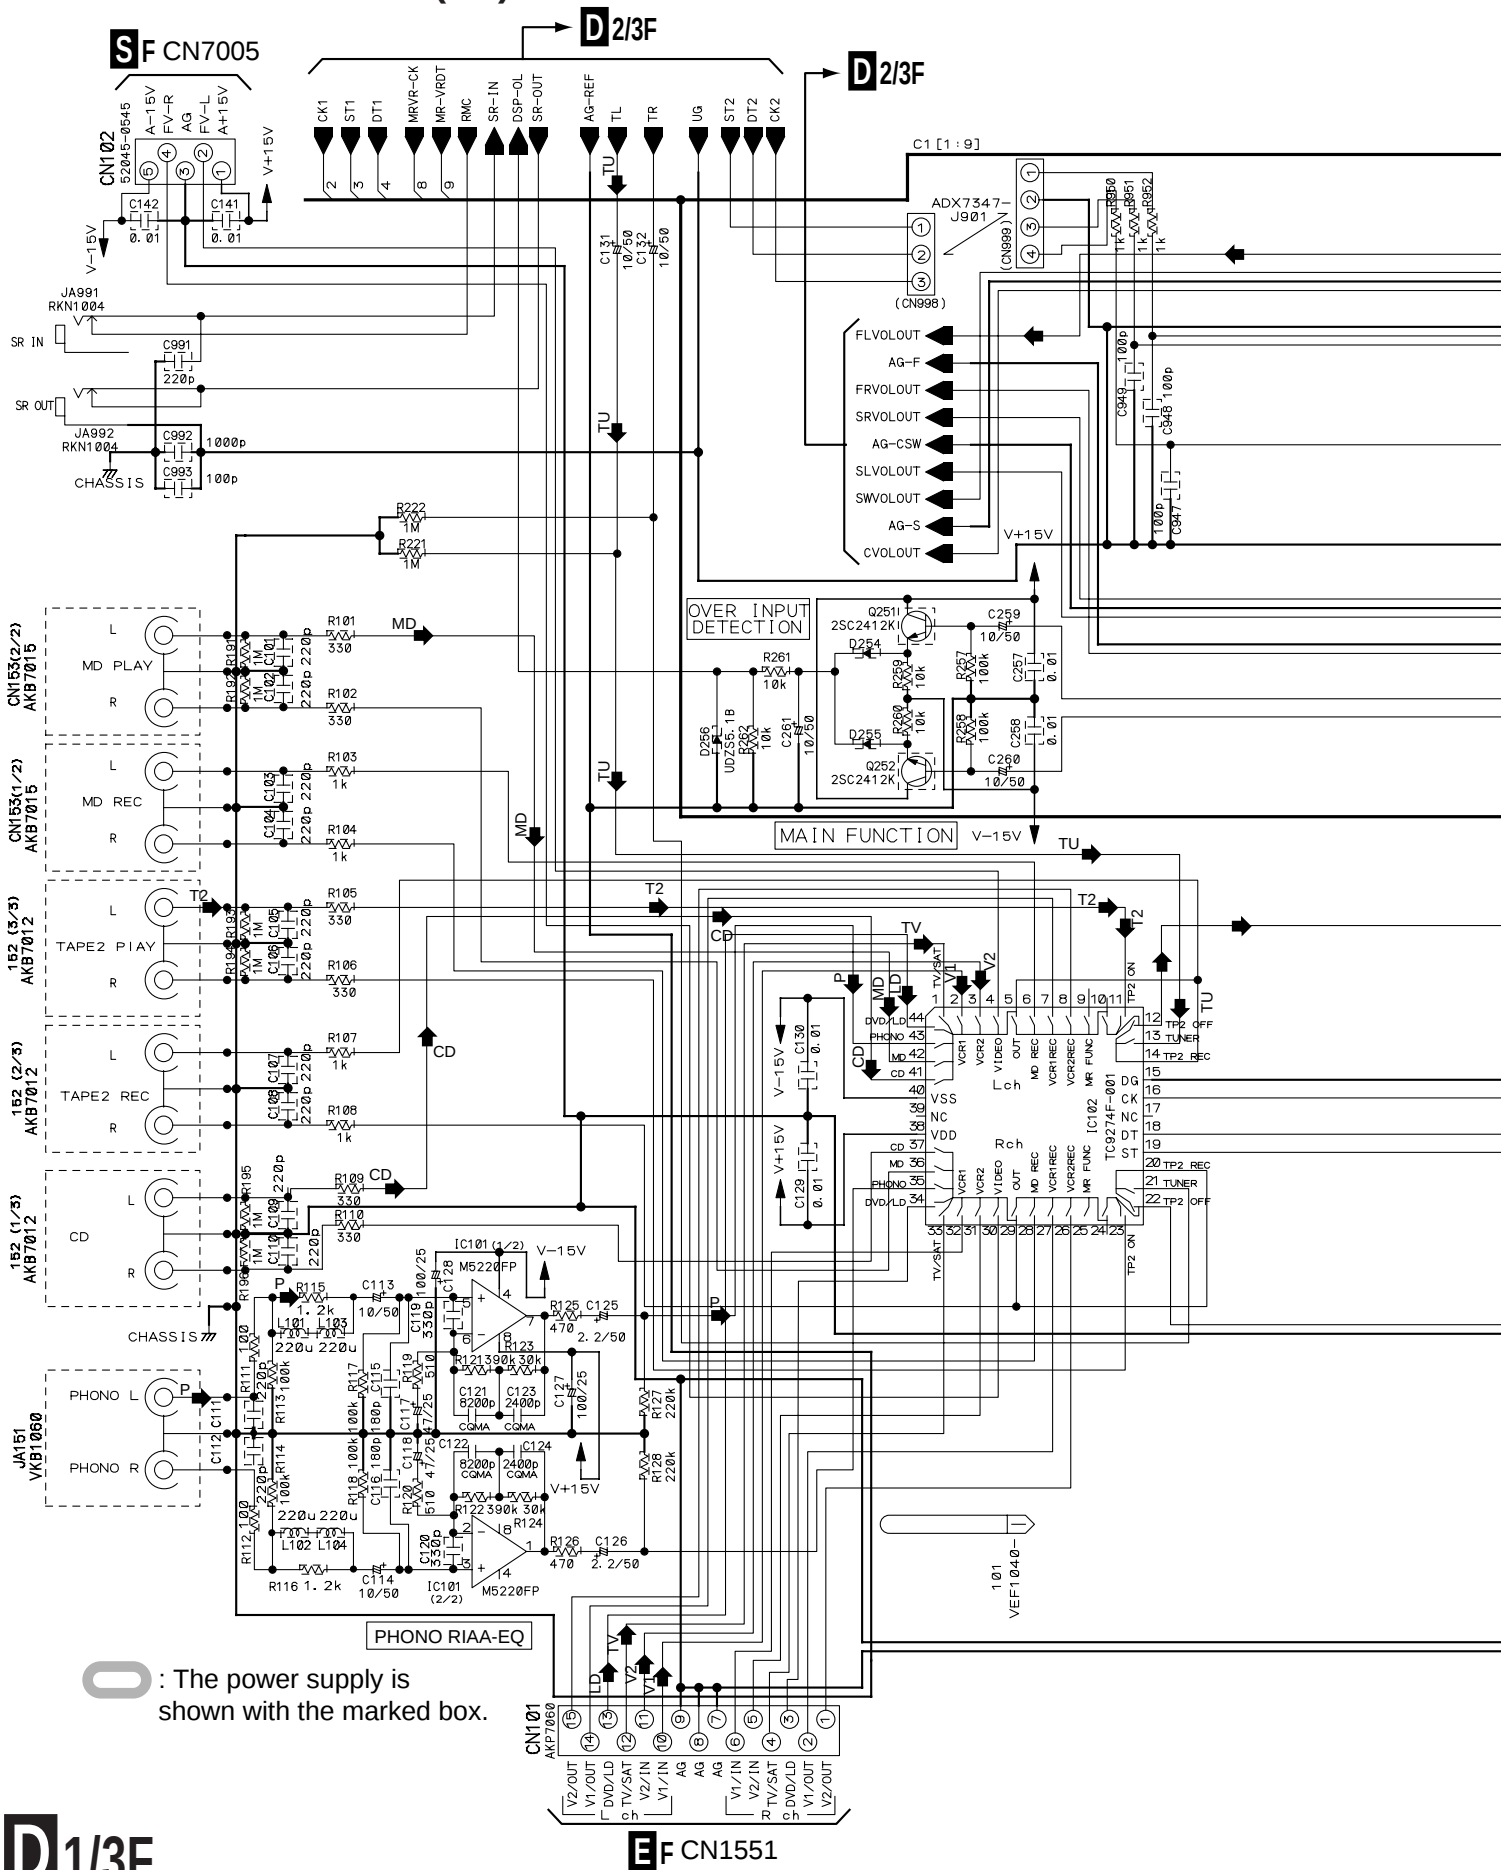

D1/3 F MAIN CONTROL ASSY (VSX-D859TX : AWX7607) (VSX-D859TXG : AWX7605)

- ◆: AUDIO SIGNAL ROUTE
 LD ◆: AUDIO SIGNAL ROUTE (LD)
 TV ◆: AUDIO SIGNAL ROUTE (TV)
 V1 ◆: AUDIO SIGNAL ROUTE (VCR1)
 V2 ◆: AUDIO SIGNAL ROUTE (VCR2)
 MD ◆: AUDIO SIGNAL ROUTE (MD)
 P ◆: AUDIO SIGNAL ROUTE (PHONO)
 TU ◆: AUDIO SIGNAL ROUTE (TUNER)
 CD ◆: AUDIO SIGNAL ROUTE (CD)
 T2 ◆: AUDIO SIGNAL ROUTE (TAPE2)

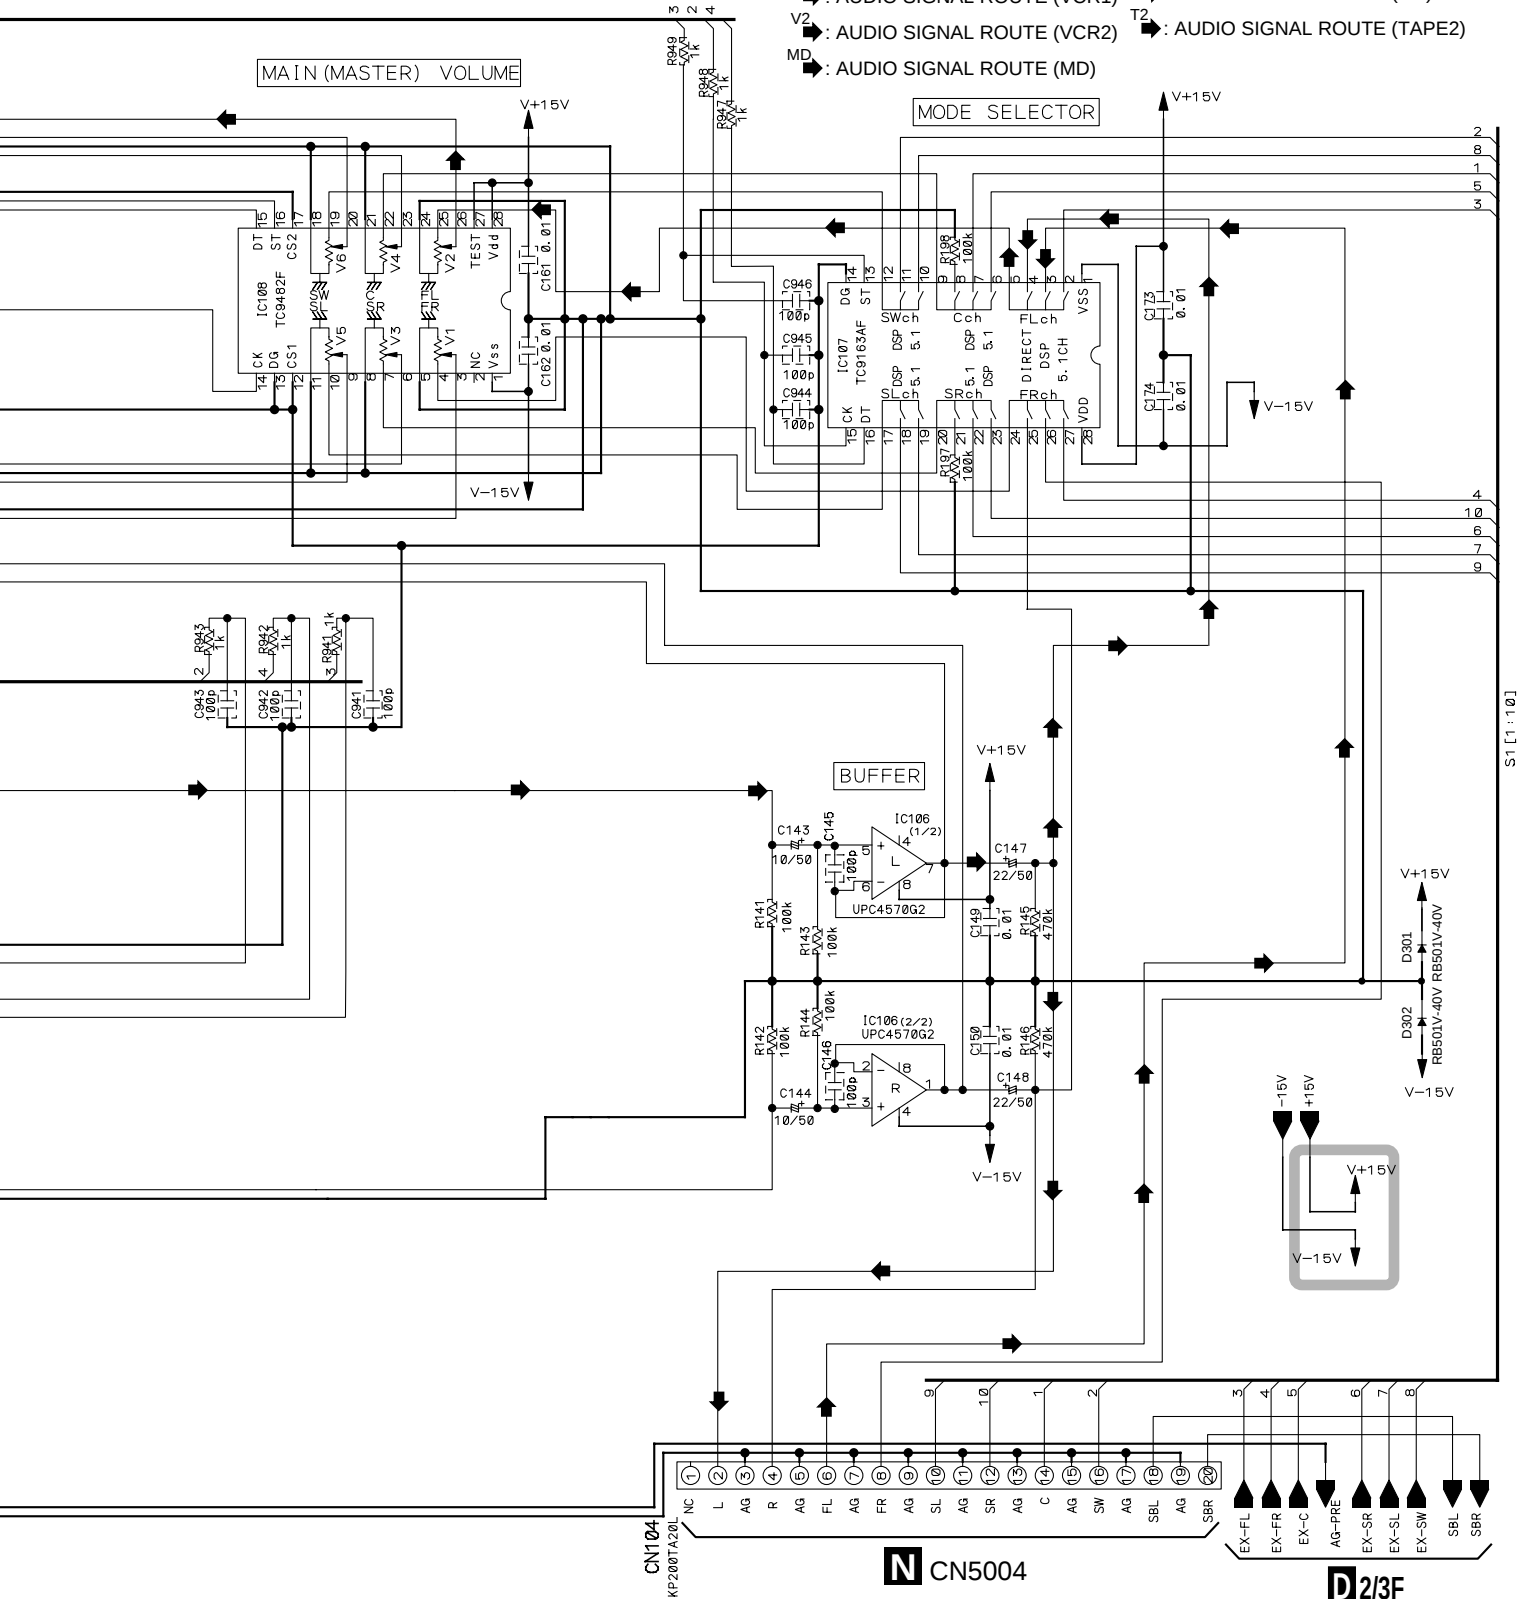

3.4 MAIN CONTROL ASSY (2/3)

A

B

C

D

